




# Badger Meter | ORION® Water Endpoints

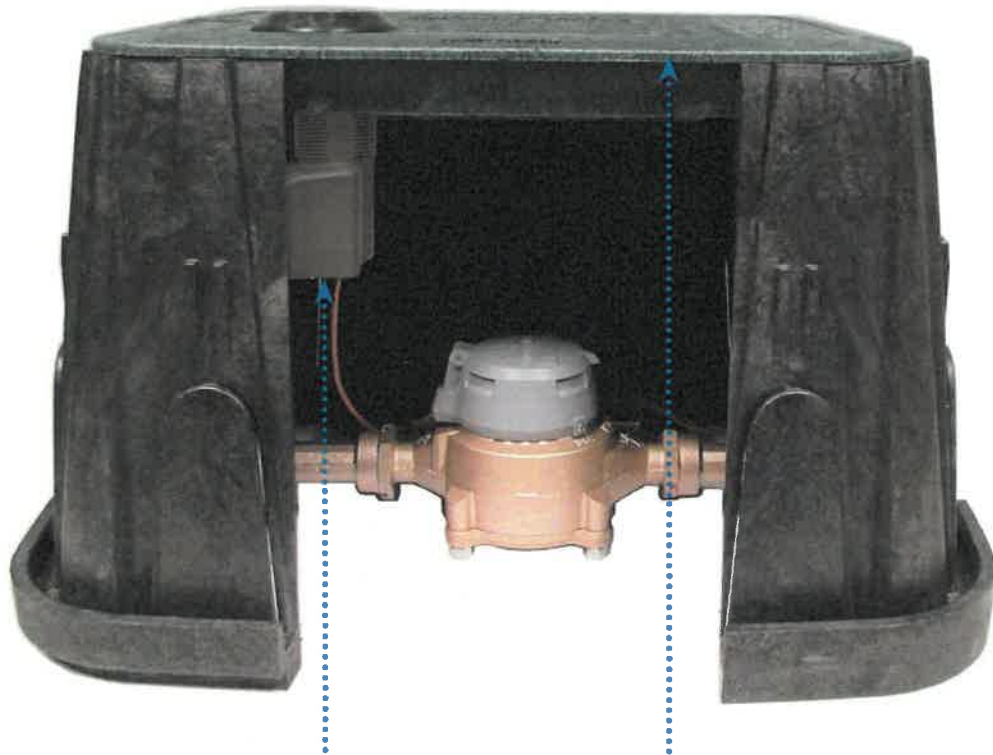

*Image shown represents ORION Cellular LTE endpoint installed, as per instructions, through non-metal pit lid*

## CONTENTS

SCOPE OF THIS MANUAL .....	3
PRODUCT UNPACKING AND INSPECTION .....	3
LICENSE REQUIREMENTS .....	3
IDENTIFICATION .....	4
Endpoints .....	4
Endpoint Dimensions .....	4
Encoders/Register .....	4
ORION CELLULAR LTE-M, LTE ENDPOINTS .....	5
ORION FIXED NETWORK AND MIGRATABLE ENDPOINTS .....	7
ORION CLASSIC ENDPOINTS .....	9
ACTIVATING ENDPOINTS .....	11
CHANGING REGISTRATION FOR AN EXISTING ENDPOINT ASSEMBLY .....	12
ENDPOINT INSTALLATION KITS .....	13
64394-032 WALL COVER INSTALL KIT .....	14
67625-001 IR Holder for Wall Cover Install Kit .....	15
Outdoor Installation for Endpoint with In-line Connector .....	16
64394-031 WALL BRACKET INSTALL KIT - ORION CELLULAR LTE .....	16
64394-029 WALL BRACKET INSTALL KIT .....	17
64394-008 C-CLAMP WALL BRACKET INSTALL KIT .....	18
64394-003 PIPE INSTALL KIT .....	19
64394-023 COMMERCIAL METER MOUNTING BRACKET INSTALL KIT .....	20
64394-030 THRU-THE-LID INSTALL KIT .....	21
64394-009 INTEGRATED PIT LID HANGER INSTALL KIT .....	22
INTEGRAL ENDPOINT INSTALLATION .....	23
HR-E LCD Encoder Integral Configuration .....	23
HR-E Encoder Integral Configuration .....	25
ENDPOINT STATUS TOOL FOR ORION CELLULAR ENDPOINTS .....	27
IN-LINE CONNECTORS .....	29
Twist Tight Connector .....	29
308 Connector .....	30
Nicor Connector .....	30
USING GEL CAPS TO CONNECT AN ENCODER .....	31

## 64394-009 INTEGRATED PIT LID HANGER INSTALL KIT


**Integrated Pit Lid Hanger Install Kit (PN: 64394-009)** is designed for ORION endpoints installed below composite and plastic lids that have an integrated AMR/AMI endpoint hanger.

**For use with:** ORION Fixed Network, Migratable, and Classic endpoints

To install an ORION endpoint with this kit, follow these steps and refer to *Figure 36*.

1. Thread the lock nut onto the top of the ORION endpoint as shown.
2. Slide the endpoint into the lid bracket.
3. Tighten the lock nut so that the endpoint is held firmly in place.

Installation is complete.

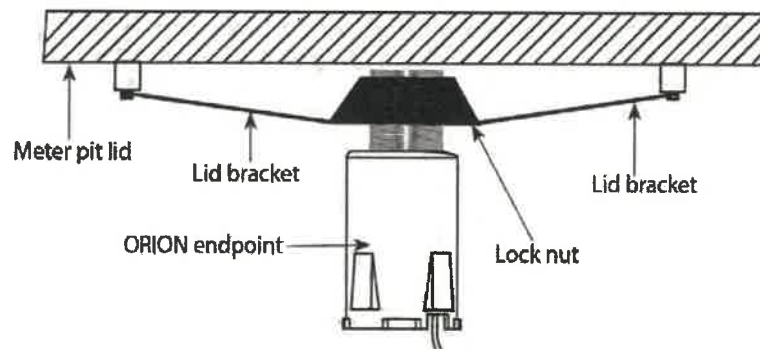

*Figure 36: Integrated pit lid hanger installation*

Meter	Ft-lb	Meter	Ft-lb
2-inch Turbo Series Meter	10.9	2-inch Compound Series Meter	16.7
3-inch Turbo Series Meter	37.5	3-inch Compound Series Meter	33.3
4-inch Turbo Series Meter	37.5	4-inch Compound Series Meter	33.3
6-inch Turbo Series Meter	37.5	6-inch Compound Series Meter	33.3
		Heavy Duty Bypass M70	21.0
		Heavy Duty Bypass M170	50.0

Installation is complete. Turn the water back on.

## 64394-030 THRU-THE-LID INSTALL KIT

The ADA-compliant **Thru-the-Lid Install Kit (PN: 64394-030)** is designed for use with a NON-METAL PIT LID, 2 inches (51 mm) maximum thickness, with a standard hole diameter of 1-7/8 inches (48 mm).

**For use with:** All ORION endpoints

To install an endpoint through a non-metal pit lid, follow these steps and refer to [Figure 34](#).

1. Screw the lock nut (large diameter side up) onto the endpoint tube threads as shown.
2. Insert the endpoint tube through the bottom of the pit lid.
3. Screw the top nut onto the endpoint tube threads.
4. Tighten the lock nut and top nut to make sure the endpoint is secure.

Installation is complete.

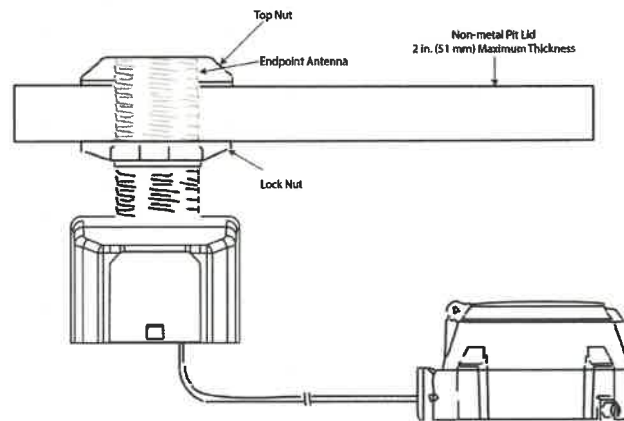


Figure 34: ORION LTE-M endpoint thru non-metal pit lid

**NOTE:** When installing an endpoint through a thick lid, you can use a **Pit Tube Extender (PN: 67025-001)**. The Extender requires a 2 inch (51 mm) diameter hole. It screws onto the threaded portion of the endpoint. Radio frequency (RF) performance may be reduced when using the Pit Tube Extender.



Figure 35: Endpoint pit tube extender – NOT for ORION Cellular endpoints

**Do not use Pit Tube Extender with ORION Cellular endpoints.**

## IN-LINE CONNECTORS

In-line connectors are used to allow AMA/AMR/AMI device connectivity without the need for a field splice kit. There are three available in-line connector types: Twist Tight, 308, Nicor.

When ordered separately, the endpoint and encoder (or electronic meter) in-line connectors come with removable caps, which can be removed in the field before joining the connector ends. With the proper orientation, the connector ends go together easily. No tools are necessary.

**NOTE:** Additional removable caps are available for order. Part numbers are listed in *Figure 53*, *Figure 55*, and *Figure 57*.

### CAUTION

**BEFORE JOINING, MAKE SURE ALL SURFACES OF THE CONNECTOR ENDS ARE CLEAN, DRY, AND FREE OF ANY DEBRIS OR DIRT. THIS STEP IS ESSENTIAL TO MAKE SURE THE CONNECTOR REMAINS WATER TIGHT AND SUBMERSIBLE.**

### Twist Tight Connector

To use the Twist Tight connector, follow these steps and refer to *Figure 53*.

1. Remove the protective caps. Twist the rotating collar on each connector counter clockwise (left) to loosen and remove the cap.
2. Align the notches inside each connector and push the ends together until the endpoint-side is fully seated in the encoder-side connector.



Figure 52: Twist Tight in-line connector



Figure 53: Twist Tight connector ends and caps - close up view

3. On the endpoint-side connector, twist the rotating collar clockwise (right) until the ends are tightly connected. When tightly connected, the tabs at the top of the connectors should be aligned and the red O ring on the encoder-side connector should NOT be visible.

### IMPORTANT

Do NOT use tools to tighten the connector ends. Hand tighten only.

### Twist Tight Extension Harness

An extension harness connects in-line between the meter- and endpoint-side connectors. Extension harnesses are available in the lengths shown, with and without a cable shield. The cable shield offers extra protection for harsh environments such as pit installations.

Part Number Harness only	Extension Harness Length	Part Number Harness with Cable Shield
68307-009	5 ft extension	68883-002
68307-010	10 ft extension	68883-004

**NOTE:** For more information about the Twist Tight connector, refer to the *Twist Tight In-line Connector Assembly Application Data Sheet*, available in the Resource Library at [www.badgermeter.com](http://www.badgermeter.com).

### 308 Connector

To use the 308 connector, follow these steps and refer to [Figure 55](#).

1. Squeeze the notched area and pull to remove the cap(s).
2. Align the notches inside each connector and push the ends together. You will hear a "click" when the connector ends are firmly seated and secure.



Figure 54: 308 in-line connector



Protective cap endpoint-side  
PN: 66233-005



Protective cap encoder-side  
PN: 66233-006



Endpoint-side



Encoder-side

Figure 55: 308 connector ends and caps - close up view

**NOTE:** For additional information, refer to the [308 In-line Connector Assembly Application Data Sheet](#), available in the Resource Library at [www.badgermeter.com](http://www.badgermeter.com).

### Nicor Connector

To use the Nicor connector, follow these steps and refer to [Figure 57](#).

1. Pull the cap(s) straight off to remove.
2. Locate the arrow on each connector. With the arrows pointed toward each other, push the ends together until the encoder-side connector is fully seated into the endpoint-side connector. There should be no visible gap.



Figure 56: Nicor in-line connector



Dust cap endpoint-side  
PN: 66488-014



Dust cap encoder-side  
PN: 66488-004



Endpoint-side



Encoder-side

Figure 57: Nicor connector ends and caps - close up view

### Nicor Extension Harness

An extension harness connects in-line between the meter- and endpoint-side connectors. An extension harness in this lead length is available with the Nicor connector.

Part Number	Extension Harness Length
66488-024	10 ft extension



## SCOPE OF THIS MANUAL

This manual contains installation instructions for ORION® Cellular LTE-M, LTE, and ORION Fixed Network (SE), Migratable (ME) and Classic (CE) water endpoints.



ORION endpoints installation must comply with all applicable federal, state and local rules, regulations and codes.

Failure to read and follow these instructions can lead to misapplication or misuse of this product, resulting in personal injury and damage to equipment.

Proper performance and reliability of ORION endpoints depend upon installation in accordance with these instructions. Endpoints not properly installed may not be covered under warranty.

**WARNING:** The operation of transmitters and receivers on airlines is strictly prohibited by the Federal Aviation Administration. As such, the shipping of radios and endpoints via air is prohibited. Please follow all Badger Meter return and/or shipping procedures to prevent exposure to liability.

### Related Literature

These related documents are available in the Resource Library at [www.badgermeter.com](http://www.badgermeter.com).

- *ORION Water Endpoint Installation Kits Ordering Guide*
- *ORION Cellular CDMA Endpoints Installation Manual*
- *ORION Water Endpoint Parts List*
- *ORION Cellular INTL Installation Manual*
- *ORION Endpoint Utility Software Manual*, software version 2.7.2 or later required for LTE-M endpoints

## PRODUCT UNPACKING AND INSPECTION

Upon receipt of the product, perform the following unpacking and inspection procedures.

**NOTE:** If damage to shipping container is evident upon receipt, request the carrier to be present when product is unpacked.

Carefully open the shipping package, following any instructions that may be marked on the exterior. Remove all cushioning material surrounding the product.

**ORION Endpoints:** Carefully remove the pre-wired ORION endpoint or ORION endpoint encoder assembly from the container and inspect for damage. Retain the contents of the installation kit for use in mounting the endpoint in the field.

**Other products:** Carefully lift the product from the package. Visually inspect the product and applicable accessories for any physical damage such as scratches, loose or broken parts or any other sign of damage that may have occurred during shipment. Retain the package and all packing material for possible use in reshipment or storage.

**NOTE:** If damage is found, request an inspection by the carrier's agent within 48 hours of delivery and file a claim with the carrier. A claim for equipment damage in transit is the sole responsibility of the purchaser.

## LICENSE REQUIREMENTS

ORION Fixed Network, Migratable and Classic endpoints comply with Part 15 of FCC Rules. ORION Cellular LTE-M and LTE endpoints comply with Part 15, Part 22, Part 24, and Part 27 of FCC Rules. Operation is subject to the following conditions: (1) These devices may not cause harmful interference, and (2) these devices must accept any interference received, including interference that may cause undesired operation of the device.

In accordance with FCC Regulations, "Code of Federal Regulations" Title 47, Part 2, Subpart J, Section 1091, transmitters pass the requirements pertaining to radiation exposure. However, to avoid public exposure in excess of limits for general population (uncontrolled exposure), a 20 centimeter distance between the transmitter and the body of the user must be maintained during operation.

No FCC license is required by a utility to operate an ORION meter reading system.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## IDENTIFICATION

### Endpoints

The ORION water endpoint is a three-wire metering device (Figure 1) for indoor/outdoor use. Each endpoint has a unique numeric serial number on the tag attached to the cable harness (wire) and etched on the endpoint housing.

Endpoints require connection to an encoder to complete the assembly. Badger Meter encoders are shown in Figure 4.

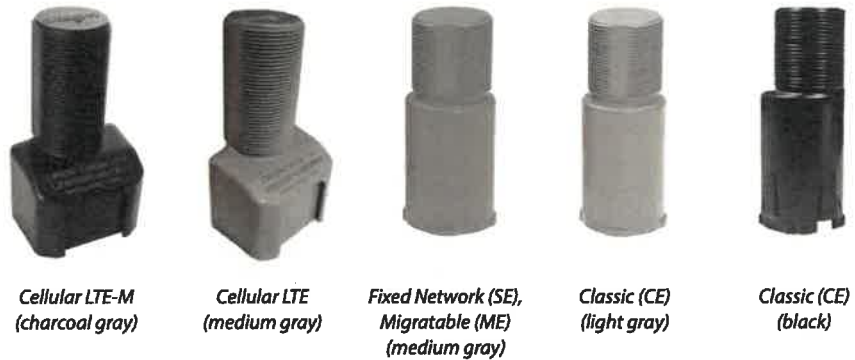


Figure 1: ORION endpoints

### Endpoint Dimensions

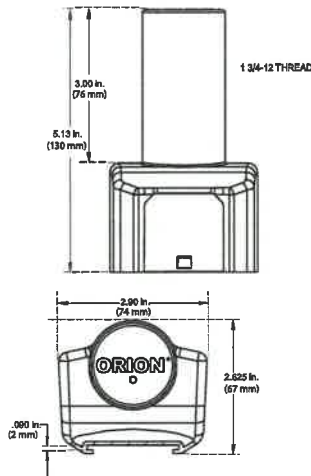


Figure 2: ORION Cellular LTE-M, LTE endpoint dimensions

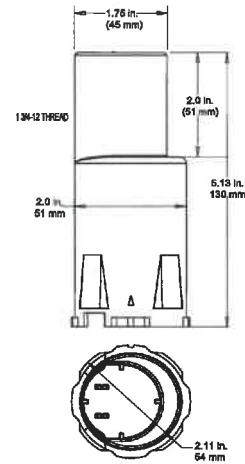


Figure 3: ORION endpoint dimensions (all except ORION Cellular LTE-M, LTE)

### Encoders/Register

The encoder connects to the endpoint to complete the assembly. Each Badger Meter encoder is identified on the face of the register with an assembly number, unit of measure and meter model. Current and legacy products are shown in Figure 4.



Figure 4: Encoders and register



## ORION CELLULAR LTE-M, LTE ENDPOINTS

This section includes configuration, encoder compatibility and installation information for ORION Cellular LTE-M and LTE endpoints.

The serial number is engraved on one side of the endpoint base, and the yellow FCC label is displayed on the other side (*Figure 5*).

ORION Cellular LTE serial numbers range upward from 11xxxxxx. ORION Cellular LTE-M serial numbers range upward from 12xxxxxx.

### Endpoint Configurations

The following configuration options are available.



Figure 5: ORION Cellular LTE-M endpoint pictured

#### Endpoint Configurations

Endpoint only with in-line connector (Twist Tight® or Nicor®)

Endpoint only with flying lead for field splice

Endpoint/encoder assembly with in-line connector

#### Encoder Connection

Connect the endpoint to an encoder using the in-line connector. See *"In-line Connectors"* on page 29.

See *Field Wiring, Encoder Connectivity and Read Resolution* below.

Endpoint/encoder assemblies (endpoints connected by an in-line connector to a Badger Meter encoder) are shipped from the factory, ready for installation. See *Field Wiring, Encoder Connectivity and Read Resolution* and *"In-line Connectors"* on page 29.

### Field Wiring, Encoder Connectivity and Read Resolution

ORION Cellular LTE-M and LTE endpoints with flying leads are shipped from the factory pre-programmed. Connect all three endpoint wires to an encoder to complete installation. The endpoint connection can be made to existing wires from the encoder or directly to the encoder terminal screws, depending on the application and manufacturer. Endpoints can be connected to Badger Meter high resolution encoders and E-Series Ultrasonic meters as well as a number of competitive encoders.

See the wiring chart on the next page.

**NOTE:** For instructions on field wiring using gel connectors, see *"Using Gel Caps to Connect an Encoder"* on page 31. Follow the manufacturer's instructions provided with the gel cap/field splice kit you are using.

ORION endpoint wires: Red = Power/Clock; Black = Ground; Green = Data

Endpoint Label	Encoder Connectivity	Endpoint Wire Colors			Reading Resolution	
		Red	Black	Green		
ORION Cellular LTE-M, LTE	Badger Meter HR-E LCD or HR-E encoders or E-Series Ultrasonic and Ultrasonic Plus Meter with High Resolution output	Encoder Wire/Termination Colors	Red	Black	Green	Up to nine (9) most significant digits
	Elster InVISION and ScanCoder® encoders and evoQ4 meter (encoder output)*		Green	Black	Red	Up to nine (9) most significant digits
	Metron-Farnier Hawkeye*		Red	Black	Green	Up to nine (9) most significant digits
	Mueller Systems 420 Solid State Register (SSR) LCD*		Red	Black	Green	Up to nine (9) most significant digits
	Neptune ProRead, E-coder or ARB-V*		Black	Green	Red	Up to nine (9) most significant digits
	Sensus Electronic Register encoder (ECR) or ICE*		Red	Black	Green	Up to nine (9) most significant digits
	Master Meter® Octave® Ultrasonic meter (encoder output)*		Red	Black	Green	Up to eight (8) most significant digits
	Hersey Translator*		Due to the customized, factory wire configurations of the Hersey Translator, the terminal posts may not match the ORION endpoint wire colors. Please contact Hersey for the terminal post wiring schematic of your encoders to determine how the posts correspond to ORION endpoint wires.			

**NOTE:** Competitive encoder output is determined by the encoder configuration.

\*ORION Cellular endpoints are compatible with the encoders/meters noted above that have a manufacture date within 10 years of the current date as long as the encoder has three wires connected to it and is programmed into the three-wire output mode for AMR/AMI. Encoder registers with two-wire mode of operation require programming by the Utility, including registers that support auto two- or three-wire detection systems that do not automatically switch to three-wire mode of operation when a compatible endpoint is connected for ORION connectivity.

### Installation Guidelines (Indoor, Outdoor, Pit)

Install the endpoint/encoder assembly according to these guidelines:

- **Indoor/Outdoor Installation:**
  - Indoor installation is **recommended**. Mount endpoints indoors, in the floor joist near an outside wall and away from large metal objects.
  - Outdoor installation is acceptable and may be required where signal strength does not support an indoor installation.

### IMPORTANT

- **Pit Installation:** Mount ORION Cellular LTE-M, LTE endpoints through a NON-METAL pit lid—**REQUIRED**.

**NOTE:** Endpoints not properly installed may not be covered under warranty.

### Endpoint Activation

See "Activating Endpoints" on page 11 for details of the process.

# ORION FIXED NETWORK AND MIGRATABLE ENDPOINTS

This section includes configuration, encoder compatibility and installation information for ORION Fixed Network (SE) and ORION Migratable (ME) endpoints.

The serial number is engraved on the endpoint body. Serial numbers range from 30000000 to 59999999.

## Endpoint Configurations

The following configuration options are available.



Figure 6: ORION Fixed Network (SE) and ORION Migratable (ME) endpoint

### Endpoint Configurations

Endpoint only with in-line connector (Twist Tight, Nicor, 308)

Endpoint only with flying lead for field splice

Endpoint/encoder assembly with in-line connector

Prewired integral endpoint/encoder assembly

### Encoder Connection

Connect the endpoint to an encoder using the in-line connector. See *"In-line Connectors"* on page 29.

See *Field Wiring, Encoder Connectivity and Read Resolution* below.

Endpoint/encoder assemblies (endpoints connected by an in-line connector to a Badger Meter encoder) are shipped from the factory, ready for installation.

Mount the assembly on the bayonet of the meter. See *"Integral Endpoint Installation"* on page 23 for details.

## Field Wiring, Encoder Connectivity and Read Resolution

ORION SE and ME endpoints with flying leads are shipped from the factory pre-programmed. Connect all three wires to an encoder to complete installation. The endpoint connection can be made to existing wires from the encoder or directly to the encoder terminal screws, depending on the application and manufacturer. Endpoints can be connected to Badger Meter high resolution encoders and E-Series Ultrasonic meters as well as a number of competitive encoders.

See the wiring chart on the next page.

**NOTE:** For instructions on field wiring using gel connectors, see *"Using Gel Caps to Connect an Encoder"* on page 31. Follow the manufacturer's instructions provided with the gel cap/field splice kit you are using.

ORION endpoint wires: Red = Power/Clock; Black = Ground; Green = Data

Endpoint Label	Encoder Connectivity	Endpoint Wire Colors			Reading Resolution
		Red	Black	Green	
ELCD or ENC	Badger Meter HR-E LCD or HR-E encoders, or E-Series Ultrasonic Meter with High Res output	Red	Black	Green	Up to eight (8) most significant digits
ADE or ENC	Badger Meter ADE or E-Series Ultrasonic Meter with ADE output	Red	Black	Green	Up to six (6) most significant digits
RTR	Badger Meter RTR or E-Series Ultrasonic Meter with RTR output	Red	Black	Green	Up to seven (7) most significant digits
ADE or ENC	Elster/AMCo ScanCoder or Invision* Elster evoQ4 meter (encoder output)*	Green	Black	Red	Up to eight (8) most significant digits
C700D	Elster/AMCo C700 Digital*	Red	Black	Not used – cut green wire flush with outer sheath	Up to seven (7) most significant digits
ADE or ENC	Master Meter Octave Ultrasonic meter (encoder output)*	Red	Black	Green	Up to eight (8) most significant digits
ADE or ENC	Metron Hawkeye*	Red	Black	Green	Up to eight (8) most significant digits
ADE or ENC	Mueller Systems 420 Solid State Register (SSR) LCD*	Red	Black	Green	Up to eight (8) most significant digits
ADE or ENC	Neptune ProRead, E-coder or ARB-V*	Black	Green	Red	Up to eight (8) most significant digits
ADE or ENC	Sensus Electronic Register encoder (ECR) or ICE*	Red	Black	Green	Up to eight (8) most significant digits
ADE or ENC	Hersey Translator*	Due to the customized, factory wire configurations of the Hersey Translator, the terminal posts may not match the ORION endpoint wire colors. Please contact Hersey for the terminal post wiring schematic of your encoders to determine how the posts correspond to ORION endpoint wires.			

**NOTE:** Competitive encoder output is determined by the encoder configuration.

\*ORION SE and ME ADE or ENC endpoints are compatible with the encoders/meters noted above with a manufacture date within 10 years of the current date as long as the encoder is programmed into the three-wire output mode for AMR/AMI and has three wires connected to it. Encoder registers with two-wire mode of operation require programming by the Utility, including registers that support auto two- or three-wire detection systems that do not automatically switch to three-wire mode of operation once a compatible endpoint is connected for ORION connectivity.

### Installation Guidelines (Indoor, Outdoor, Pit)

Install the endpoint/encoder assembly according to these guidelines:

- **Indoor/Outdoor Installation:** Mount outside the building, or indoors in the floor joist near an outside wall and away from large metal objects.
- **Pit Installation, ORION SE Endpoints:** Mount through a NON-METAL pit lid—**REQUIRED**.
- **Pit Installation, ORION ME Endpoints:** Mount through a NON-METAL pit lid—**Recommended**.

**NOTE:** Endpoints not properly installed may not be covered under warranty.

### Endpoint Activation

See "Activating Endpoints" on page 11 for details of the process.

## ORION CLASSIC ENDPOINTS

This section includes configuration, encoder compatibility and installation information for ORION Classic (CE) endpoints.

The serial number is engraved on the endpoint body. Serial numbers range from 70000000 to 89999999.

### Endpoint Configurations

The following configuration options are available.



Figure 7: ORION Classic (CE) Endpoint

#### Endpoint Configurations

Endpoint only with in-line connector  
(Twist Tight, Nicor, 308)

Endpoint only with flying lead for field splice

Endpoint/encoder assembly with  
in-line connector

Prewired integral endpoint/encoder assembly

#### Encoder Connection

Connect the endpoint to an encoder using the in-line connector. See ["In-line Connectors" on page 29](#).

See [Field Wiring, Encoder Connectivity and Read Resolution](#).

Factory prewired endpoints, connected to a Badger Meter encoder, are shipped, ready for installation. No splicing required. See ["Endpoint Installation Kits" on page 13](#).

Mount the assembly on the bayonet of the meter. See ["Integral Endpoint Installation" on page 23 for details](#).

### Field Wiring, Encoder Connectivity and Read Resolution

ORION CE endpoints with flying leads are shipped from the factory pre-programmed. Connect all three wires to an encoder to complete installation. The endpoint connection can be made to existing wires from the encoder or directly to the encoder terminal screws, depending on the application and manufacturer. Endpoints can be connected to Badger Meter high resolution encoders and E-Series Ultrasonic meters as well as a number of competitive encoders as shown in the wiring chart on the next page.

**NOTE:** For instructions on field wiring using gel connectors, see ["Using Gel Caps to Connect an Encoder" on page 31](#).

ORION endpoint wires: **Red** = Power/Clock; **Black** = Ground; **Green** = Data

Endpoint Label	Encoder Connectivity	Endpoint Wire Colors			Reading Resolution
		Red	Black	Green	
ADE	Badger Meter ADE, HR-E LCD or HR-E encoders, or E-Series Ultrasonic Meter with High Res or ADE output	Red	Black	Green	Up to seven (7) most significant digits
RTR	Badger Meter RTR or E-Series Ultrasonic Meter with RTR output	Red	Black	Green	Up to seven (7) most significant digits
UNIV*	Elster/AMCo ScanCoder or Invision	Green	Black	Red	Up to seven (7) most significant digits
UNIV*	Master Meter Octave Ultrasonic meter (encoder output)	Red	Black	Green	Up to seven (7) most significant digits
UNIV*	Metron Hawkeye	Red	Black	Green	Up to seven (7) most significant digits
UNIV*	Mueller Systems 420 Solid State Register (SSR) LCD	Red	Black	Green	Up to seven (7) most significant digits
ARB-V*/**	Neptune ARB-V for connectivity to ORION endpoint > serial number 80000000	Black	Green	Red	Up to seven (7) most significant digits
ARB-V*/**	Neptune ARB-V for connectivity to ORION endpoint < serial number 79999999	Red	Black	Green	Up to seven (7) most significant digits
UNIV*	Neptune ProRead or E-coder	Black	Green	Red	Up to seven (7) most significant digits
UNIV*	Sensus Electronic Register Encoder (ECR) or ICE	Red	Black	Green	Up to seven (7) most significant digits
UNIV*	Hersey Translator	Due to the customized, factory wire configurations of the Hersey Translator, the terminal posts may not match the ORION endpoint wire colors. Please contact Hersey for the terminal post wiring schematic of your encoders to determine how the posts correspond to ORION endpoint wires.			

**NOTE:** Competitive encoder output is determined by the encoder configuration.

\*ORION Classic UNIV and ARB-V endpoints are compatible with the encoders/meters noted above with a manufacture date within 10 years of the current date as long as the encoder is programmed into the three-wire output mode for AMR/AMI and has three wires connected to it. Encoder registers that are currently in two-wire mode of operation require programming by the Utility, including registers that support auto two- or three-wire detection systems that do not automatically switch to three-wire mode of operation once a compatible endpoint is connected for ORION connectivity.

\*\*A separate ORION CE Universal endpoint is available for connectivity to the Neptune ARB-V encoder. Make sure the ORION Classic endpoint has "ARB-V" on the harness label when wiring to an ARB-V encoder. Wiring differs depending on the serial number of the ORION endpoint you are connecting to the ARB-V encoder, so make sure to verify wiring is correct per the above chart.

### Installation Guidelines (Indoor, Outdoor, Pit)

Install the endpoint/encoder assembly according to these guidelines:

- **Indoor/Outdoor Installation:** Mount outside the building, or indoors in the floor joist, near an outside wall, and away from large metal objects.
- **Pit Installation:** Mount through a NON-METAL pit lid—**Recommended**.

**NOTE:** Endpoints not properly installed may not be covered under warranty.

### Endpoint Activation

See "Activating Endpoints" on page 11 for details of the process.



## ACTIVATING ENDPOINTS

Activation is dependent on whether the endpoint is in “Pause” (soft sleep) or “Stop” (hard sleep) mode. The ORION Endpoint Utility software can be used to identify the endpoint radio mode.

### Smart Activation for Endpoints in Pause Mode

All ORION endpoints offer a Smart Activation feature which utilizes consumption to automatically start an endpoint in Pause mode. After installation, the endpoint radio “wakes up” and begins broadcasting data when the encoder to which it is connected detects enough water usage from the register. No field programming or special tools are required, but the amount of water consumption depends on the encoder output and meter size so activation times will vary. Infrared (IR) activation tools are available for use if immediate activation is desired. See the *ORION Endpoint Utility User Manual*, available in the Resource Library at [www.badgermeter.com](http://www.badgermeter.com).

**NOTE:** Using the IR Alignment Tool (PN: 68779-001) is recommended for IR activation.

### Endpoint/Encoder Assemblies

An initial encoder read is stored by the endpoint at the time the encoder and endpoint are factory connected and the endpoint is placed in Pause mode. While in Pause mode, the endpoint monitors the encoder for consumption, checking once every fifteen minutes. When the endpoint/encoder assembly is installed and sufficient water is running through the meter, the endpoint automatically “wakes up” and transitions to its operational mode when the required consumption is registered (see table below).

Encoder Output	Dial Change Required to Activate
7-dial	Any 1 unit change in the least significant digit
8-dial	Any 5 unit change in the least significant digit
9-dial	Any 5 unit change in the least significant digit

Table 1: Activation consumption thresholds

### Endpoint Only

Like endpoint/encoder assemblies, ORION endpoint only configurations can be shipped in Pause mode. The initial encoder read will be established the first time an endpoint is field connected to an encoder.

**NOTE:** It may take up to fifteen (15) minutes for an endpoint to recognize the initial encoder read. To expedite this process, Badger Meter recommends connecting an ORION endpoint to an encoder in advance of field installation so the baseline encoder read can be captured before installing the endpoint.

After the initial encoder read is stored, the endpoint monitors the encoder for consumption, checking for a change in the encoder read once every fifteen minutes thereafter. The endpoint automatically “wakes up” and transitions to its operational mode once the required amount of consumption is registered (see [Table 1](#)).

### Activation for Endpoints in Stop Mode

Endpoints in Stop mode must be manually activated via IR communication using either the Badger Meter IR Communication Device (PN: 68891-001) or the ORION Endpoint Utility software with an ORION handheld or mobile reading system. The software can also be used to identify the endpoint radio mode. For more information, see the *ORION Endpoint Utility User Manual* for Handheld or Tablet/Laptop in the Resource Library at [www.badgermeter.com](http://www.badgermeter.com).

## IMPORTANT

*Badger Meter IR Communication Devices that shipped prior to January 15, 2019 require a firmware update to use with ORION Cellular LTE-M endpoints. Contact Badger Meter Utility Technical Support (800-616-3837) or your National Meter Field Support Team Representative for help.*

## Confirming Installation - ORION Cellular LTE-M, LTE

Before leaving the installation site, the installer can confirm endpoints are active and communicating.

1. BEACON® AMA users can check ORION Cellular endpoint activation status with the **ORION Endpoint Status** tool. Endpoints do not need to be provisioned in BEACON AMA to display using the tool. See "[Endpoint Status Tool for ORION Cellular Endpoints](#)" on page 27 for more information.
2. The IR Communication Device (PN: 68891-001) can be used to confirm endpoint activation and verify the encoder connection. Instructions are included with the device. See the **IMPORTANT** note on page 11 in the [Activation for Endpoints in Stop Mode](#) section regarding required device firmware update.

Active endpoints automatically transition to the appropriate network.

## Confirming Installation - ORION SE, ME, CE

Before leaving the installation site, the installer can use an ORION handheld or ORION Mobile Reading system to confirm the endpoint is broadcasting RF data for reading. See the appropriate handheld or ORION Mobile Reading system user manuals, available in the Resource Library at [www.badgermeter.com](http://www.badgermeter.com), for more information.

## Active Endpoints

<b>ORION Cellular LTE-M, LTE</b>	When the endpoint transitions to <i>Active</i> mode, it begins the network registration process. BEACON AMA assigns a daily call-in time to the endpoint as part of this process. An active operating ORION Cellular LTE-M or LTE endpoint obtains a current encoder read every 15 minutes.
<b>ORION SE, ME and CE</b>	When the endpoint transitions to <i>On-Mobile</i> mode, it begins broadcasting its message for fixed network or mobile data collection. An active operating ORION endpoint obtains a current encoder read once an hour.

# CHANGING REGISTRATION FOR AN EXISTING ENDPOINT ASSEMBLY

## ORION Cellular LTE-M, LTE

If you change the encoder connected to an ORION Cellular LTE-M or LTE endpoint, the endpoint will recognize the new encoder, once connected, and report previous and current interval data.

## ORION SE, ME, CE

If you change the encoder connected to an ORION Fixed Network, Migratable or Classic endpoint that has previously logged historical profile data, best practice recommends following this process:

1. Extract and save the historical profile data from the endpoint. See the *ORION Endpoint Utility User Manual* for handheld or tablet/laptop, available at [www.badgermeter.com](http://www.badgermeter.com), if you need help.
2. Clear the profile data from the endpoint.
3. Connect the new encoder. Follow applicable installation instructions in this manual. The endpoint will recognize the new encoder, once connected, and record interval data.

## ENDPOINT INSTALLATION KITS

Type	For Use With	Description	Kit Part Number (PN)
REMOTE	All ORION endpoints	<i>64394-032 Wall Cover Install Kit</i>	64394-032
REMOTE	64394-032, 66009-004	<i>67625-001 IR Holder for Wall Cover Install Kit</i>	67625-001
REMOTE	ORION Cellular LTE-M, LTE	<i>64394-031 Wall Bracket Install Kit - ORION Cellular LTE</i>	64394-031
REMOTE or PIT	SE, ME, CE	<i>64394-029 Wall Bracket Install Kit - ORION</i>	64394-029
REMOTE	All ORION endpoints	<i>64394-008 C-Clamp Wall Bracket Install Kit - ORION</i>	64394-008
REMOTE or PIT	All ORION endpoints	<i>64394-003 Pipe Install Kit-ORION</i>	64394-003
REMOTE	All ORION endpoints	<i>64394-023 Commercial Meter Mounting Bracket Install Kit-ORION</i>	64394-023
PIT	All ORION endpoints	<i>64394-030 Thru-the-Lid Install Kit</i>	64394-030
PIT	ORION SE, ME, CE	<i>64394-009 Integrated Pit Lid Hanger Install Kit</i>	64394-009

Instructions for using each installation kit follow in this section.

Refer to the *ORION Water Endpoints Installation Kit Ordering Guide* and the *ORION Water Endpoint Parts List* for individual endpoint kit components. Both documents are available in the *Resource Library* at [www.badgermeter.com](http://www.badgermeter.com).

## 64394-032 WALL COVER INSTALL KIT

**Wall Cover Install Kit PN: 64394-032** is recommended for proper mounting of an endpoint for indoor and outdoor remote applications, and is designed to provide an environmentally protected area for gel splice connections (if needed). Outside dimensions are shown in [Figure 9](#).

**For use with:** All ORION endpoints



Figure 8: 64394-032 wall cover enclosure

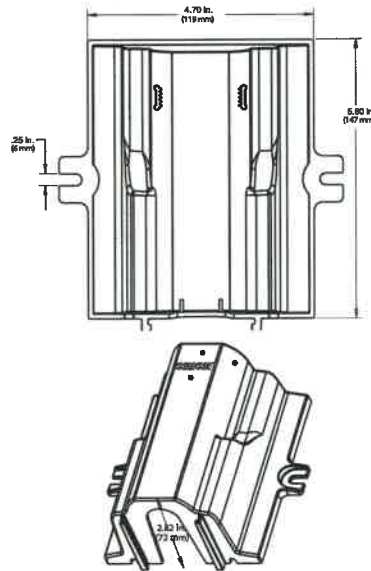


Figure 9: 64394-032 Outside dimensions

To install an ORION endpoint, follow these steps.

1. Choose an appropriate installation location within the limits of the endpoint cable/connector harness.
2. Verify the proper orientation ([Figure 10](#)). The bottom of the enclosure has an opening for IR programming. The opening gives access to the endpoint IR LED port ([Figure 13](#) and [Figure 14](#)) without having to disassemble the unit.
3. Place the endpoint into the wall cover enclosure, antenna (threaded portion) up.

**Cellular LTE-M, LTE endpoints:** [Figure 10](#) shows the correct endpoint placement.

**All other ORION endpoints:** Make sure the flat side of the endpoint faces in and fits up against the inside wall of the enclosure.

**NOTE:** If double-sided tape is included in the kit, you can use the tape to temporarily secure the endpoint inside the enclosure before mounting.

4. Position the endpoint cable.
  - Route the endpoint cable through the cutout on the bottom of the wall cover.

**NOTE:** If you are drilling a hole through the wall behind the enclosure for the endpoint cable, the cable does not need to route through the cutout at the bottom.

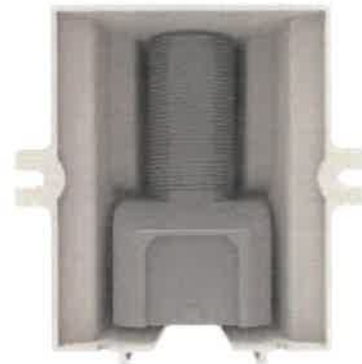


Figure 10: ORION Cellular LTE endpoint orientation

- If the endpoint has an in-line connector, place the connector *inside* with the endpoint and route the connector cable through the cutout on the bottom.

**NOTE:** If used, place gel splice connections inside the enclosure.

**NOTE:** See "[Outdoor Installation for Endpoint with In-line Connector](#)" on [page 16](#) for additional information about installing the endpoint outdoors with the wall cover enclosure.

5. Make sure the wall cover is properly positioned, with the endpoint antenna straight up and the endpoint IR LED port visible through the bottom opening.
6. Secure the wall cover using customer-supplied screws.  
Installation is complete.



Figure 11: 64394-032 installation complete

### 67625-001 IR Holder for Wall Cover Install Kit

**IR Holder for Wall Cover Install Kit (PN: 67625-001)** is an optional part which can be ordered for use with the Wall Cover install kit (**64394-032**). The IR holder bracket fits on the wall cover adapter rails to hold an IR programming head in place.

1. Place the optical head of an IR programming cable into the holder. The nubs on the optical head fit into the cutouts on the holder.



(PN: 67625-001) IR holder bracket



Optical head of the IR programming cable



Optical head in the bracket

Figure 12: IR holder and programming cable optical head

2. Slide the bracket into the adapter rails at the bottom of the wall cover enclosure (64394-032) so the IR optical head is aligned with the endpoint LED port. See [Figure 13](#) and [Figure 14](#).
3. Connect the IR programming cable to a Badger Meter mobile reading device to perform IR functions. Refer to the mobile reading device user manual for IR programming instructions.



Figure 13: IR LED port ORION Cellular LTE endpoint (bottom up view)



Figure 14: IR LED port ORION ME endpoint (bottom up view)

## Outdoor Installation for Endpoint with In-line Connector

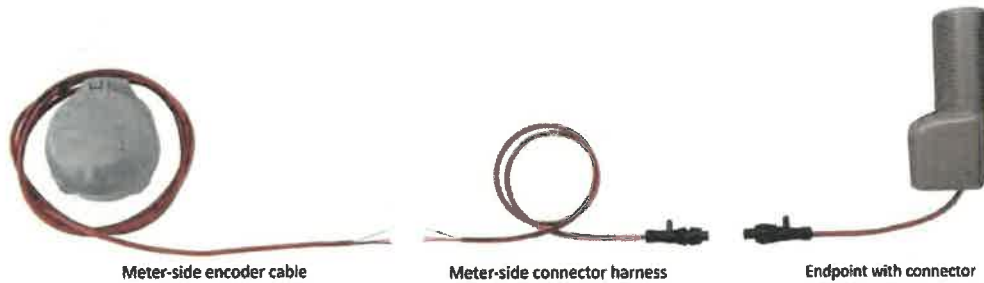


Figure 15: Outdoor endpoint installation

Meter-side connector harnesses are available with Twist Tight and Nicor connectors in the following lengths.

### Harness with Twist Tight Connector

Part Number	Harness Lead Length
68307-006	10 ft harness
68307-003	25 ft harness

### Harness with Nicor Connector

Part Number	Harness Lead Length
66488-006	10 ft harness
66488-003	25 ft harness

Follow these recommended installation steps for an outdoor endpoint installation and refer to the image in [Figure 15](#).

**NOTE:** The Twist Tight connector is pictured above. The installation steps also apply to endpoints with Nicor and 308 connectors as well. See ["In-line Connectors"](#) on page 29 for more information.

1. Choose an appropriate outdoor location, within the limits of the connector harness, and mount the endpoint.

**NOTE:** If using a wall cover enclosure, see ["64394-032 Wall Cover Install Kit"](#) on page 14 for additional information on mounting.

2. Join the endpoint connector with the connector mate of the encoder cable.  
If you are using a wall cover enclosure, place the in-line connector inside the enclosure.
3. Drill a small hole in the wall of the house/structure to accommodate the endpoint/encoder cable.
4. Pass the cable end with the flying leads through the wall of the house.
5. Inside the house, connect the encoder wires. Depending on the encoder connection, use a field splice kit or connect the wires directly to the encoder terminal screws. See the appropriate wiring charts in this manual if you need help.

**NOTE:** Refer to the [Field Splice Kit Application Data Sheet](#), available in the Resource Library at [www.badgermeter.com](http://www.badgermeter.com), for field splice instructions.

When the meter, encoder and endpoint are installed and connected, installation is complete.

## 64394-031 WALL BRACKET INSTALL KIT - ORION CELLULAR LTE

**Wall Bracket Kit PN: 64394-031** ([Figure 16](#)) is available for mounting an ORION Cellular LTE-M or LTE endpoint.

**For use with:** ORION Cellular LTE-M, LTE endpoints only

The bracket clips into the slot on the endpoint and can be used to attach the endpoint to a wall. A screwdriver and two (2) customer-supplied screws are required. Drill pilot holes for the screws (**recommended**) before attaching the wall bracket and endpoint.

The bracket can also be used to mount the endpoint to a pole with cable ties (customer supplied) threaded through the bracket openings.



Figure 16: 64394-031



## 64394-029 WALL BRACKET INSTALL KIT

**Wall Bracket Install Kit (PN: 64394-029)** can be used to securely install an ORION endpoint. For non-submerged indoor and outdoor applications, the bracket can be used in any indoor or outdoor *nonmetallic* joist, wall or pit application.

**For use with:** All ORION endpoints *except* ORION Cellular LTE-M, LTE endpoints

You will need the following items.

- Wall Bracket install kit
- Two customer-supplied screws
- Screwdriver and drill

To connect the bracket to the endpoint and mount, follow these steps.

1. Using the screw holes of the wall bracket as a guide, drill two pilot holes on the joist or wall where the bracket is to be installed.



Figure 17: Endpoint wall bracket

### Connect the endpoint

2. Carefully slide the encoder cable harness through the slit in the bracket with the screw holes at the bottom (Figure 18).
3. Locate the small triangle and hole underneath the bracket (Figure 19). The triangle is used to align the bracket with the endpoint.



Figure 18: Threading cable harness

4. Locate the small raised triangle at the bottom of the ORION endpoint housing (Figure 20).



Figure 19: Aligning triangle



Figure 20: Housing triangle

5. Align the endpoint and bracket triangles. Then push the bracket and endpoint together. This should be easy.
6. With one hand holding the bracket, use the other hand to twist the endpoint approximately 1/4 turn clockwise until you feel it lock into place (Figure 22).

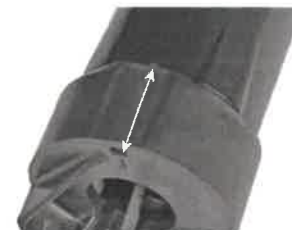


Figure 21: Align triangles and push bracket onto endpoint

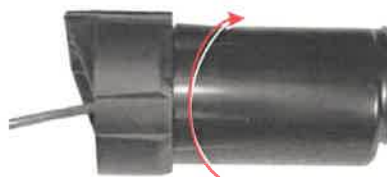


Figure 22: Twist endpoint to lock

**Mount the endpoint assembly**

- 7. Make sure the endpoint antenna is upright (Figure 23) when you place it into its final position.
- 8. Using two customer-supplied screws, secure the bracket assembly using the pilot holes you drilled in Step 1.

Installation is complete.



Figure 23: Endpoint positioning

## 64394-008 C-CLAMP WALL BRACKET INSTALL KIT

**C-Clamp Wall Bracket Install Kit (PN: 64394-008)** can be used when mounting an endpoint to a wall.

**For use with:** All ORION endpoints. For ORION Cellular endpoints, the kit can be used for indoor and remote installations, but should NOT be used in a vault.

To mount an ORION endpoint using this kit, follow these steps and refer to [Figure 24](#).

- 1. Choose an appropriate location on the wall for the endpoint. Using an appropriate size fastener and washer (customer-supplied), mount the C-clamp to the wall through the opening at the back. When mounting in a vault, install the C-clamp close to the top to prevent damage when accessing the meter is required.  
**NOTE:** ORION Cellular endpoints should NOT be mounted in a vault.
- 2. Place the neoprene spacer from the installation kit around the endpoint, approximately 1/2 inch (13 mm) from the top of the endpoint. Hold the neoprene spacer in place with your fingers.
- 3. Thread the lock nut onto the endpoint until it makes contact with the neoprene spacer.
- 4. Insert the endpoint into the C-clamp, making sure the neoprene spacer stays inside the C-clamp.
- 5. Close the C-clamp and lock it in place so that it closes over the neoprene spacer and securely holds the endpoint as shown in [Figure 24](#).

Installation is complete.

**NOTE:** ORION radio endpoints perform best with a clear line of sight. Performance varies with installation.



Figure 24: C-Clamp and placement

## 64394-003 PIPE INSTALL KIT

**Pipe Install Kit (PN: 64394-003)** with mounting support bracket (*Figure 25*) is designed for pipe installations on a 3/8, 5/8 and 1/2 inch rebar or 1/2 inch schedule 40 PVC pipe.

**For use with:** All ORION endpoints. For ORION Cellular endpoints, the kit can be used for indoor and remote installations, but should NOT be used under a pit lid.

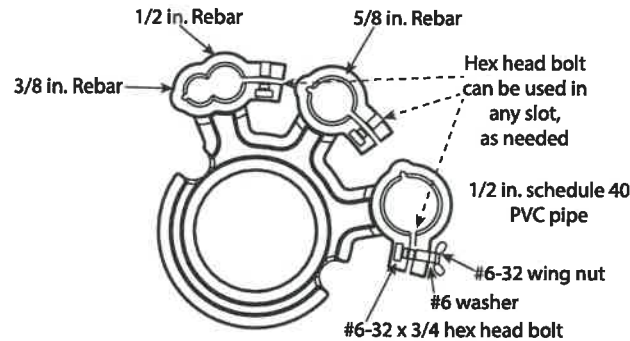


Figure 25: Support bracket (knuckles)

To install an ORION endpoint using the mounting support bracket, follow these steps.

1. Drive rebar or stake into the ground, or use a free-standing pipe or rebar.

### **CAUTION**

**DRIVE REBAR OR STAKE INTO THE GROUND PRIOR TO ATTACHING THE ENDPOINT TO AVOID DAMAGE.**

2. Slide the mounting support bracket on the rebar/stake/pipe and secure using the enclosed washer, wing nut and hex head bolt provided with the bracket. The hex head bolt fits in any slot.

**NOTE:** The bracket can be installed with either side up, but installing with the smooth side up is recommended if installed outdoors to avoid potential rainwater build up.

3. Insert the threaded end of the endpoint up through the bottom of the bracket opening. Then thread the lock nut onto the endpoint and tighten the lock nut to secure the bracket (*Figure 26*). For pit installations, mount the endpoint a maximum of 1...2 inches (25...51 mm) below the pit lid. (NOT for ORION Cellular endpoints!)
4. Install the bracket anywhere along the length of the endpoint threaded end, as long as it is at least 0.5 in. (13 mm) below the top where the antenna is located. Installation is complete.

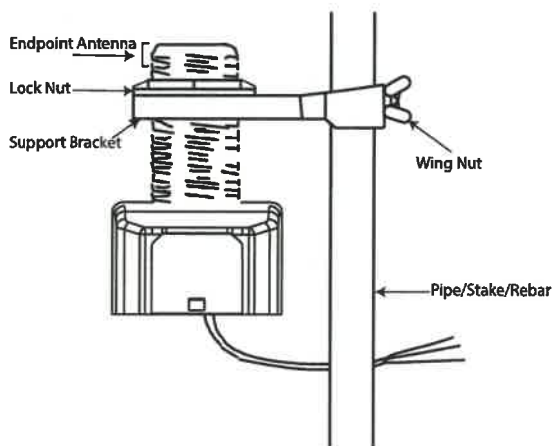


Figure 26: Pipe installation kit with ORION Cellular LTE-M, LTE endpoints

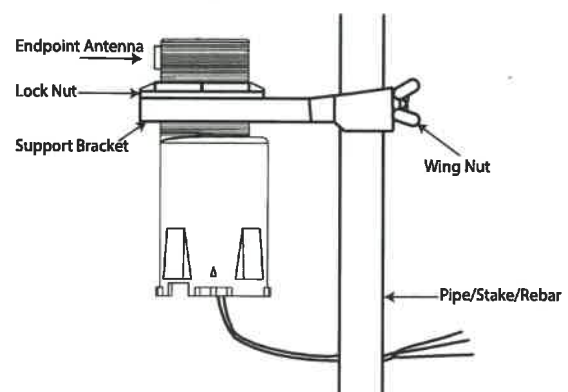


Figure 27: Pipe installation kit with ORION SE, ME, CE endpoints

## 64394-023 COMMERCIAL METER MOUNTING BRACKET INSTALL KIT

**Commercial Meter Mounting Bracket Install Kit (PN: 64394-023)** is designed for use with most Badger Meter Turbo, Compound Series and Fire Service Disc bypass meter lines. Use the kit to securely mount an ORION endpoint to a meter.

**For use with:** All ORION endpoints

You will need a torque wrench set for installation. The kit components are:

- Stainless steel mounting bracket PN: 66360-001
- Lock nut PN: 62825-001

To install the bracket, follow these steps:



Figure 28: Stainless steel mounting bracket



Figure 29: Lock nut with gussets

1. Verify that the water is turned off.
2. Slip the mounting bracket over the top of the ORION endpoint, as shown.
3. Screw the lock nut from the kit onto the threaded section of the endpoint. Hand tighten the lock nut to secure the bracket.
4. At the meter, unscrew the head assembly bolt at the location where you plan to mount the endpoint.
5. Position the bracket, reinsert the bolt and hand tighten it.

**NOTE:** For visual clarity, the photo in [Figure 32](#) shows the bracket without the endpoint attached.



Figure 30: Mounting bracket over endpoint



Figure 31: Tighten lock nut



Figure 32: Bracket attached with bolt

6. Position the bracket so the endpoint is as far from the meter as possible to provide adequate space for the endpoint signal to propagate ([Figure 33](#)).

### IMPORTANT

*If two ORION endpoints are required for a fire series assembly or a compound meter application, mount the endpoints on OPPOSITE sides of the meter head assembly.*

7. With the torque wrench, tighten the bolt as indicated in the chart that follows.



Figure 33: Endpoint connected to meter with bracket

## INTEGRAL ENDPOINT INSTALLATION

ORION SE, ME and CE endpoints are available in an integral configuration in which the endpoint and encoder are connected in one assembly. There are two types of integral configurations. This section includes instructions for mounting an integral endpoint on a meter and also provides instructions for disassembling both types of integrals.

### Mounting an Integral Endpoint on the Meter

An integral endpoint can be installed on any Badger Meter Disc, Turbo, or Compound Series meter. Both integral configuration styles mount to the meter the same way, by placing the assembly onto the bayonet of the meter and rotating it into its locking position. See [Figure 37](#).

1. Loosen the security screw on the endpoint encoder assembly.
2. Mount the assembly housing on the meter bayonet.
3. Turn the assembly clockwise 1/4 turn to lock the assembly into place on the meter.
4. After the assembly is mounted on the meter, tighten the security screw to secure the assembly to the register.

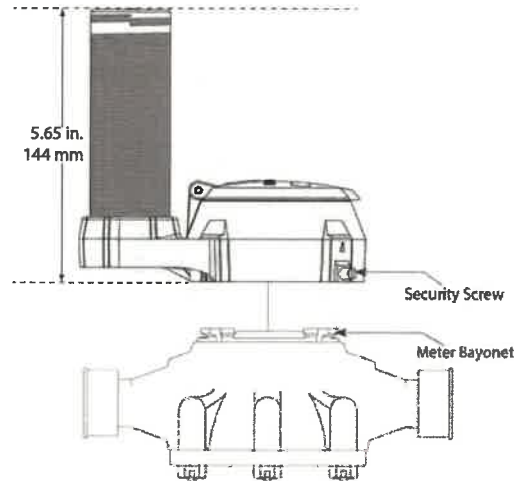


Figure 37: Integral assembly on meter

### HR-E LCD Encoder Integral Configuration



Figure 38: HR-E LCD Integral

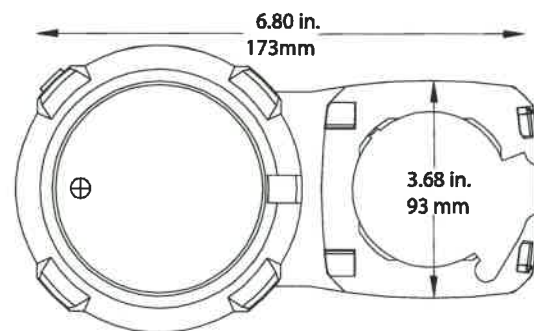


Figure 39: HR-E LCD Integral base dimensions

### Configuration

The ORION HR-E LCD Integral Assembly is shown in [Figure 38](#). In an HR-E LCD integral assembly, the endpoint is factory-wired to the encoder and both are mounted to the shroud bracket. Endpoints are available with a 3-foot or 10-foot wire that is wrapped around the body of the endpoint. The endpoint wire is contained under a removable cover. With this option, the endpoint can be removed from the housing, if necessary, and mounted away from the encoder. The endpoint can also be returned to the housing assembly without damage.

### Removing the Endpoint from the Assembly Housing

**NOTE:** The endpoint cover connects to the base with three tabs: one in the back and two in the front (closest to the encoder.)

1. Remove the integral assembly from the meter.
  - Remove the security screw at the base of the assembly. Keep the screw for remounting the encoder assembly.
  - Turn the assembly (as one piece) 1/4 turn, counter-clockwise and lift the assembly off the meter.
2. With the endpoint side of the assembly facing toward you, grasp the bottom of the cover with one hand on either side of the endpoint cover base.
3. With your thumbs, push the cover at the center of the base to release the back tab (Figure 40). Then lift up to release the front tabs and remove the cover from the base.



Figure 40: Push at center of endpoint base to release the cover



Figure 41: Cover tabs released, endpoint wire exposed

4. Twist the endpoint to release it from the housing and uncoil the wire.
5. Mount the endpoint according to recommended installation guidelines within the limits of the endpoint wire.

**NOTE:** The encoder cannot be removed from the assembly housing.

6. Remount the encoder (in the assembly housing) onto the meter bayonet.
  - Turn the assembly clockwise 1/4 turn so it locks in place.
  - Replace and tighten the security screw.

### Reattaching the Endpoint

To reattach the endpoint to the assembly housing, follow these steps.

1. Wrap the wire around the endpoint. Make sure the wire is wrapped tightly and neatly around the endpoint or the cover will not fit.
2. Insert the endpoint base into the shroud bracket. Adjust the endpoint so the tabs on the endpoint base align with the openings on the bracket, and the wire at the endpoint base fits into the opening at the back of the bracket. See Figure 42.
3. When the endpoint is correctly inserted into the bracket opening, turn the endpoint clockwise to make sure it is secure.
4. Place the cover over the endpoint, with the single tab at the back.
5. When the cover is almost completely on, align the two front tabs with the openings on the shroud bracket (closest to the encoder) and then push down until all three tabs click into place.



Figure 42: Integral bracket without endpoint



## HR-E Encoder Integral Configuration



Figure 43: HR-E Integral assembly with additional wire

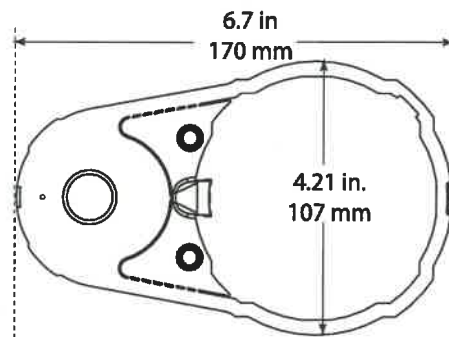


Figure 44: HR-E Integral base dimensions

### Configuration

The ORION HR-E Integral Assembly is shown in [Figure 43](#). The endpoint has a 3-foot length of wire stored inside the bottom of the assembly housing. The endpoint can be removed from the housing, if necessary, and mounted away from the encoder.

**NOTE:** Once removed, the endpoint CANNOT be reassembled into an integral configuration.

### Removing the Endpoint from the Assembly Housing

## IMPORTANT

Removing the endpoint from the assembly housing can only be done once with this integral configuration.

### CAUTION

**PRIOR TO DISASSEMBLING AN INTEGRAL ENDPOINT, VERIFY THAT THE ENDPOINT HAS THREE FEET OF WIRE PACKAGED WITH THE ASSEMBLY. CHECK THE SERIAL NUMBER LABEL ON THE SIDE OF THE INTEGRAL BRACKET TO MAKE SURE IT INDICATES "3 FT WIRE." DO NOT CONTINUE WITH THE STEPS LISTED BELOW IF YOUR INTEGRAL ENDPOINT DOES NOT HAVE THIS DESCRIPTION ON THE SERIAL NUMBER LABEL, AS ENDPOINT DAMAGE WILL OCCUR.**

1. Remove the assembly from the meter.
  - Remove the security screw at the base of the assembly. Keep the screw for remounting the encoder assembly.
  - Turn the assembly (as one piece) 1/4 turn, counter-clockwise.
  - Lift the assembly off the meter.



Figure 45: Remove assembly from meter

2. Remove the endpoint wire under the breakaway plate.
  - Turn the endpoint/encoder assembly over.
  - Grasp the pull tab located to the right of the encoder seal screw with pliers (*Figure 46*). Then pull and remove the bottom breakaway plate from the housing to expose the wire. The plate is scored to facilitate removal.
  - With your fingers, remove the three feet of endpoint wire from the housing.

**NOTE:** The wire is attached to the endpoint.



*Figure 46: Pull tab to remove the breakaway plate*

3. Rotate the endpoint counter-clockwise 1/4 turn and pull the endpoint and endpoint wire out from the assembly base.



*Figure 47: Rotate endpoint clockwise*



*Figure 48: Pull endpoint away from base*

4. Mount the endpoint according to recommended installation guidelines within the limits of the endpoint wire.

**NOTE:** The encoder cannot be removed from the assembly housing.
5. Remount the encoder (in the assembly housing) onto the meter bayonet.
  - Turn the assembly clockwise 1/4 turn so it locks in place.
  - Replace and tighten the security screw.

## ENDPOINT STATUS TOOL FOR ORION CELLULAR ENDPOINTS

BEACON® AMA users can check the activation status of ORION Cellular endpoints with the ORION Endpoint Status tool. Several minutes after installation, the tool displays ORION Cellular endpoints assigned to you. Endpoints do not need to be provisioned in BEACON AMA to display.

The browser-based tool can be viewed on a computer or mobile device. An Internet connection is required. Follow these steps to use the ORION Endpoint Status tool.

1. Go to <https://orionstatus.beaconama.net>.
2. Sign in with your BEACON email address and password (Figure 49).

*Result: The ORION Endpoint Status screen (Figure 50) opens showing the list of activated Cellular endpoints.*

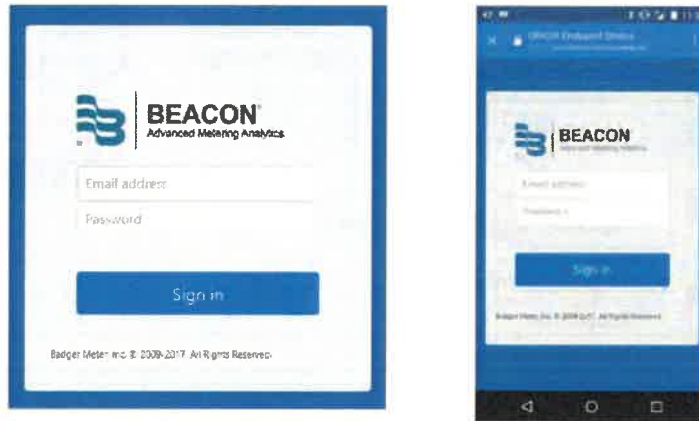


Figure 49: Tool sign in screen - computer and mobile

**NOTE:** It can take several minutes for a newly installed endpoint to communicate with the cellular network and display on the ORION Endpoint Status screen.

3. View the endpoint list.

The list displays endpoint serial number, activation time, and activation signal strength. The current endpoint and meter status are also shown. Endpoints are listed according to their activation time, with the most recent endpoint activation times listed first (top of list).

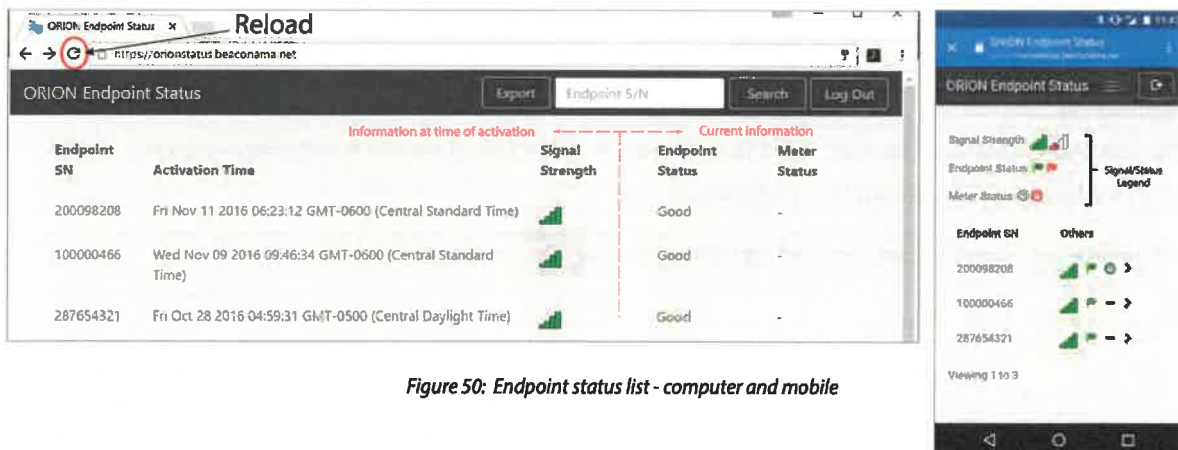



Figure 50: Endpoint status list - computer and mobile

You can also **Export** endpoints into a program such as Excel®, or **Search** to find a specific endpoint.

4. To see any new endpoints that have been added since logging in, reload/refresh the browser window. On a computer, use the reload button  at the top left of the screen. On a mobile device, swipe down the screen to refresh.

- Select an endpoint in the list to see the endpoint raw read. A window opens, like the examples shown in *Figure 51*.

**NOTE:** Information in the first three fields is captured at the time of activation. Information in the next three fields is current information.

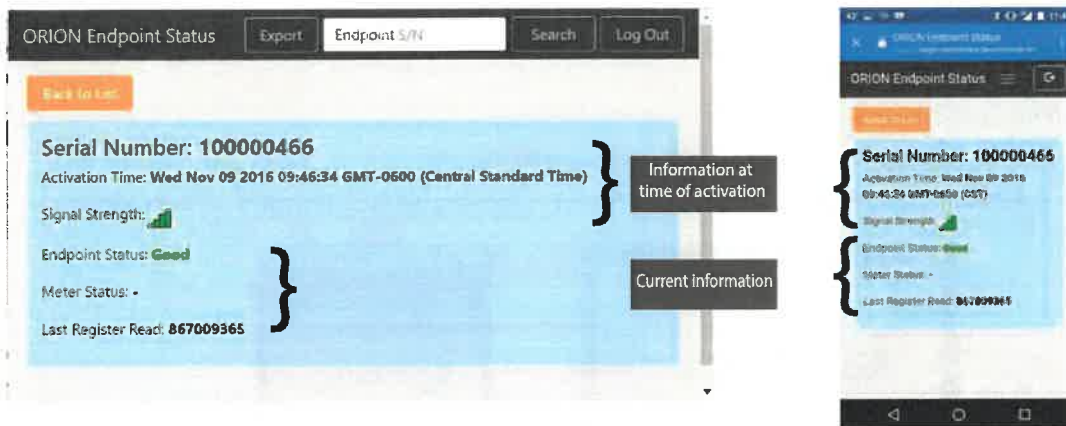


Figure 51: Status detail screen - computer and mobile

The *Endpoint Status* field displays one of the following:

Endpoint Status	Response
Good	No response required.
Endpoint Tamper or Encoder Error	Incomplete information. This message updates at the next scheduled communication.
Endpoint Tamper	Endpoint* requires attention.
Encoder Error	Encoder* requires attention.


\*For additional endpoint information, see the ORION Endpoint Utility User Manual for handheld or laptop. For additional encoder information, see the appropriate encoder user manual. All documents are available in the Resource Library at [www.badgermeter.com](http://www.badgermeter.com).

The *Meter Status* field displays one of the following:

**NOTE:** *Meter Status* only displays for E-Series Ultrasonic meters. For other meters, the field will have a dash mark (-).

Meter Status	Response
Good	No response required.
Sensor Error	Meter* requires attention.

\*For additional information, see the appropriate E-Series Ultrasonic Meter User Manual, available in the Resource Library at [www.badgermeter.com](http://www.badgermeter.com).

- Tap/click **Back to List** to return to the previous screen.
- When finished using the tool, tap the **Log Out** button or  on a mobile device.

## USING GEL CAPS TO CONNECT AN ENCODER

For those connections that are not factory wired or equipped with in-line connectors, follow these guidelines for using gel caps when splicing is required, either for installation or to fix a connection after a tamper. Refer to the wiring charts for each ORION endpoint, starting on [page 6](#).

### NOTE:

- For pit environments, splice connections require a field splice kit (PN: **62084-001**), which can be ordered separately. Refer to *Field Splice Kit for Badger Meter AMR/AMI Products*, available in the Resource Library at [www.badgermeter.com](http://www.badgermeter.com).
- For all installations, excess wire should be coiled and cable tied to avoid any damage.

### Required Tools

Splicing Tools (Customer Supplied)	Badger Meter Part Number
• Parallel Pliers	59983-001
• Coax Wire Stripper	59989-001
• Diagonal Cutting Pliers	n/a

### Connecting an Encoder Using Gel Caps

Follow these steps when using Badger Meter supplied gel caps.

1. To connect an encoder with existing wires to an ORION endpoint, strip approximately 1-1/2 inches (38 mm) of outer insulation sheath from the encoder and endpoint cables using a coax wire stripping tool. We recommend using the Badger Meter Coax Wire Stripper (PN: **59989-001**).

#### **⚠ CAUTION**

**USE CAUTION WHEN REMOVING THE OUTER SHEATH SO THAT THE INNER SIGNAL WIRE INSULATION IS NOT NICKED OR DAMAGED.**

2. Unwind the outer foil shield from the endpoint cable and cut it off even with the outer sheath using diagonal cutting pliers.
3. Connect the ORION endpoint to an approved encoder. Verify the endpoint serial number prior to completing the wiring setup.
  - Connect the encoder cable wires to the ORION endpoint wires using the insulation gel caps provided in the installation kit. Refer to the wiring charts for the endpoint type starting on [page 6](#) and determine which wires need to be connected to complete an installation.

**NOTE:** The terminal posts and wire colors may not match.

#### **⚠ CAUTION**

**DO NOT STRIP ANY INSULATION FROM THE ENDS OF THE WIRES BEFORE YOU PUSH THEM INTO THE GEL CAP.**

- Insert the wires from each cable end as far as possible into the gel cap. See [Figure 58: Wires in gel cap](#).



Figure 58: Wires in gel cap

- Using a crimping tool such as the Badger Meter Parallel Pliers (PN: 59983-001), place the gel cap with the wires into the jaws of the crimping tool.

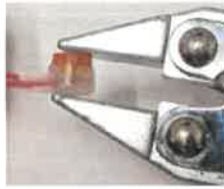


Figure 59: Gel cap in crimping tool

- Crimp the gel cap by squeezing the crimping tool handles until the gel cap is completely compressed. The Badger Meter Parallel Pliers is designed to apply just enough pressure to crimp the gel cap. Apply pressure for three seconds.



Figure 60: Compress the gel cap

- Repeat the crimping procedure for the remaining gel caps and wires.
- Attach the two plastic cable ties and tighten securely for strain relief. Snip off the excess cable tie with the wire cutter.
  - For remote installations, the connection is complete.

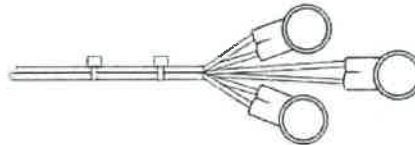


Figure 61: Cable tie attachment locations

**NOTE:** For pit installations, an appropriate field splice kit should be used. If using the Badger Meter Field Splice Kit, refer to the *Field Splice Kit Application Data Sheet* provided with the kit.

## Testing Wire Connections

Test all wiring connections to confirm connectivity, and to verify the ORION endpoint reading and the encoder reading are the same. The connections can be tested using the Quick Read function with either an ORION handheld or mobile data collector. See the appropriate software manual, available in the Resource Library at [www.badgermeter.com](http://www.badgermeter.com), for more information.

## Making Water Visible®

ADE, BEACON, Making Water Visible, ORION and RTR are registered trademarks of Badger Meter, Inc. Other trademarks appearing in this document are the property of their respective entities. Due to continuous research, product improvements and enhancements, Badger Meter reserves the right to change product or system specifications without notice, except to the extent an outstanding contractual obligation exists. © 2019 Badger Meter, Inc. All rights reserved.

[www.badgermeter.com](http://www.badgermeter.com)

The Americas | Badger Meter | 4545 West Brown Deer Rd | PO Box 245036 | Milwaukee, WI 53224-9536 | 800-876-3837 | 414-355-0400  
México | Badger Meter de las Americas, S.A. de C.V. | Pedro Luis Ogazón N°32 | Esq. Angelina N°24 | Colonia Guadalupe Inn | CP 01050 | México, DF | México | +52-55-5662-0882  
Europe, Eastern Europe Branch Office (for Poland, Latvia, Lithuania, Estonia, Ukraine, Belarus) | Badger Meter Europe | ul. Korfantego 6 | 44-193 Knurów | Poland | +48-32-236-8787  
Europe, Middle East and Africa | Badger Meter Europa GmbH | Nürtinger Str 76 | 72639 Neuffen | Germany | +49-7025-9208-0  
Europe, Middle East Branch Office | Badger Meter Europe | PO Box 341442 | Dubai Silicon Oasis, Head Quarter Building, Wing C, Office #C209 | Dubai / UAE | +971-4-371 2503  
Slovakia | Badger Meter Slovakia s.r.o. | Racianska 109/B | 831 02 Bratislava, Slovakia | +421-2-44 63 83 01  
Asia Pacific | Badger Meter | 80 Marine Parade Rd | 19-07 Parkway Parade | Singapore 449269 | +65-63464836  
Switzerland | Badger Meter Swiss AG | Mittelholzerstrasse 8 | 3006 Bern | Switzerland | +41-31-932 01 11